
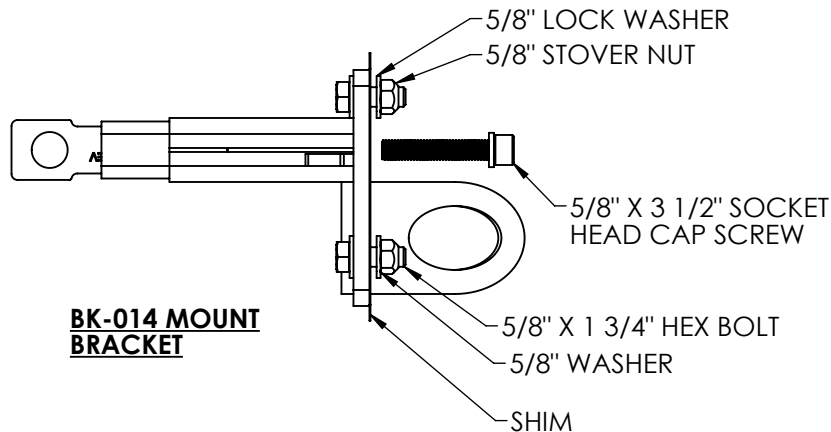


INSTALLING MG-100B/200B/300B

- 1) OPEN HOOD AND REMOVE FACTORY TOW PINS FROM TRUCK.
- 2) INSERT MOUNT BRACKETS INTO THE TOW SOCKETS (TOW PLATES SHOULD BE ON THE INSIDE OF THE BUMPER).
- 3) SLIDE FACTORY TOW PINS OR EQUIVALENT BOLT THROUGH THE TRUCK FRAME AND MOUNT BRACKETS.
- 4) TIGHTEN THE 5/8" X 3 1/2" SOCKET HEAD SCREW WITH A 5/8" LOCK WASHER TO 159 FT-LBS TO SECURE THE BRACKETS IN PLACE.
- 5) ATTACH THE MG-100B TO THE MOUNT BRACKETS USING THE TOP TWO ROWS OF SLOTS. SHIMS SHOULD BE PLACED BETWEEN THE GUARD AND THE MOUNT BRACKETS.
HARDWARE: 5/8" NC X 1 3/4" BOLT, 5/8" WASHER & 5/8" STOVER NUT
TIGHTEN TO 159 FT-LBS
(6 PLACES)
- 6) THE GUARD IS NOW INSTALLED. THE HOOD CAN BE CLOSED. REFER TO DRAWING #54268 FOR INSTALLING THE MG-200T/300T IF REQUIRED.

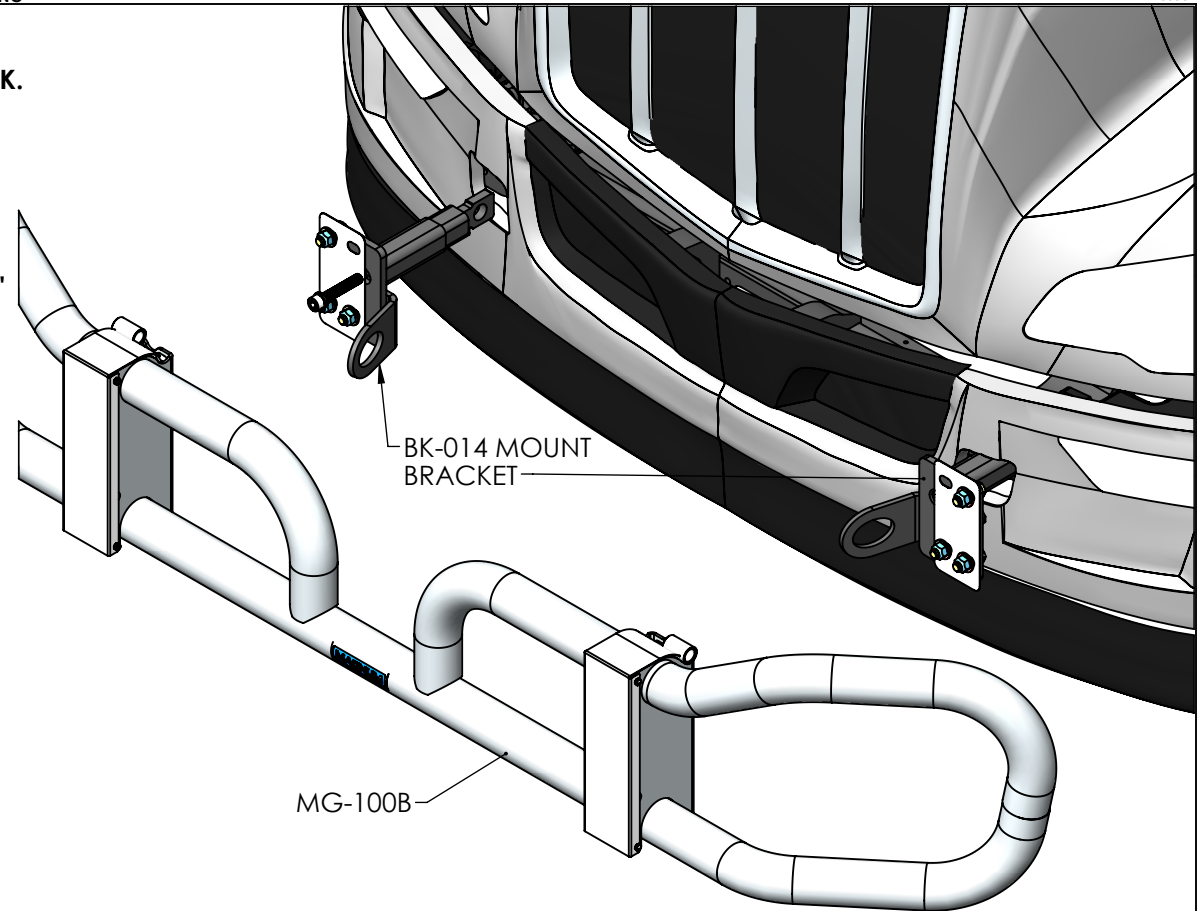

**MAGNUM TRAILER
&
EQUIPMENT INC.**

MAGNUM

FRACTIONS CHART

1/32	.03125	9/32	.28125	17/32	.53125	25/32	.78125
1/16	.0625	5/16	.3125	9/16	.5625	13/16	.8125
3/32	.09375	11/32	.34375	19/32	.59375	27/32	.84375
1/8	.125	3/8	.375	5/8	.625	7/8	.875
5/32	.15625	13/32	.40625	21/32	.65625	29/32	.90625
3/16	.1875	7/16	.4375	11/16	.6875	15/16	.9375
7/32	.21875	15/32	.46875	23/32	.71875	31/32	.96875
1/4	.25	1/2	.5	3/4	.75		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ARE:

FRACTIONS	ANGLES
+/- 1/16"	+/- 1°
.XX"	.XXX"
+/- 0.03"	+/- 0.005"

DIMENSIONS TO SHARP POINTS

SHEET NAME

Sheet1

CURRENT CUSTOMER

WO#

SCALE

1:12

TITLE

BK-014 INSTALLATION ON 2021 PETERBILT 579

STOCK NUMBER

VENDOR NUMBER

WEIGHT - LB.

95.5

DRAWN BY

MD

DRAWN DATE

12/16/2021

CHECKED BY

LS

CHECKED DATE

12/21/2021

REV.

A

MODELLER

MD

DRAWING NUMBER

AA-59961

NUMBER OF SHEETS

1